



















How use manual of electric scooter

L1266936



L/266936



1	Startup slate
2	Brake sign
3	Display speed, error code
4	Speed unit: Km/h
5	Headlight sign
6	Speed gear
7	Battery symbol

Warranty

The warranty is one year, and parts that are not damaged by human beings are replaced. If you have other questions, please contact the after-sales email.

After-sales, please feel free to contact shop email for after sale, thanks.

L/266936

Children's electric scooter


Item No.	Children's electric scooter
N.W./G.W	7.9KG/9KG
Max speed	15Km/h
Per charger	5-8Km
Lithium battery	24V2.5Ah
Max load	70Kg
Max climbing	10°
Motor	130w
Tire	front wheel6.5inch rear wheel5.5inch
Brake	Foot brake + electronic brake
Charger Voltage	24V1A
Charger Time	2-3Hour
pckage size	75.5*18.5*31.5cm

Product accessories in the box

- Horizontal handle
- Main frame
- an instruction manual
- Aluminum clip
- parts
- M6 flat head screw X5 (including 2 spare screws)
- M5 hexagon wrench
- Charger

Notes for connect to bluetooth
Please turn on your phone's bluetooth and add the device name: PT to play your favorite music.

2 function diagram

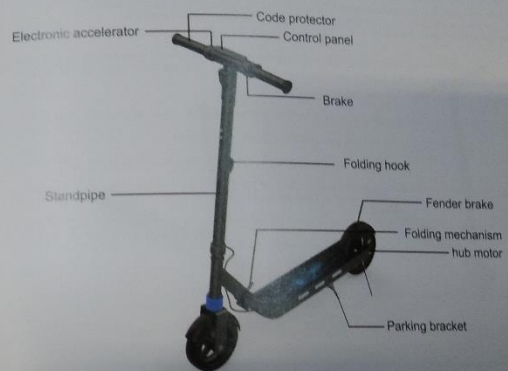

Control panel & switch button

SPEEDOMETER: used to display the current speed of scooter. The error code is displayed when a fault is detected.
Power display: display the remaining power of the battery through 5 bars. Each bar represents about 20% of the full charge of the car's battery.